


Leather Wrap Bracelet on the Endless Loom *Deb Moffett-Hall*




1-3 Select the pair of sizing rods for the desired bracelet size and assemble the loom. Using the elastics attach a thick tension rod to both end bars as shown.

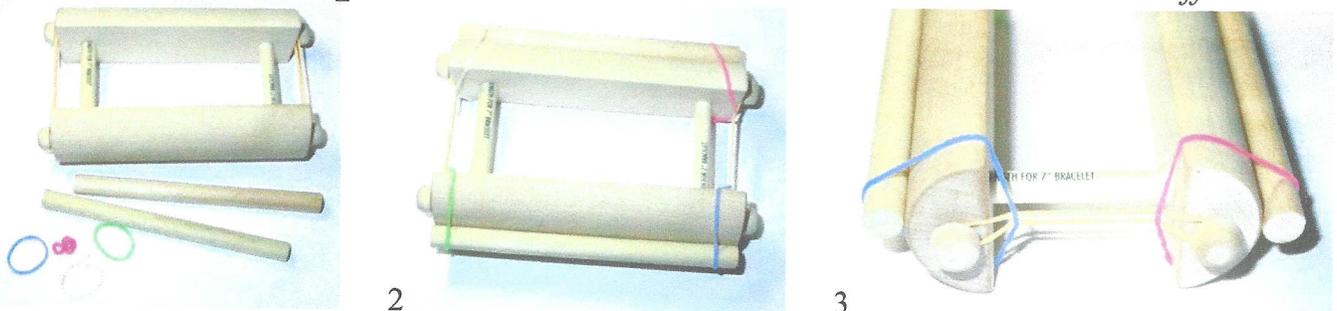


4. Measure your leather as follows: two times around the assembled loom for each bracelet wrap plus 1 ½ again for the knots. IE: for a two-wrap bracelet wrap the leather around the loom 5 ½ times.

5-6 Slide on your button and position at the center of the leather, matching the cut ends. Tie an over hand knot that will lay at the edge of the button. This allows room for the closure loops directly under the button when the bracelet is fastened.

7. On the back tie on your working thread leaving a 5" tail to tie-in later.

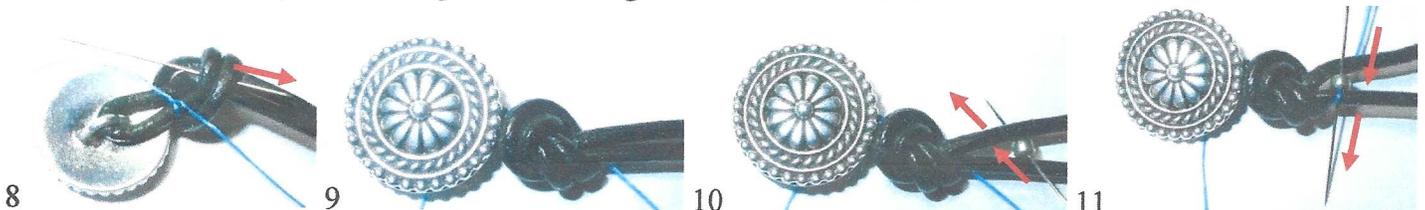


Pass the needle through the leather knot and exit. The two leather cords will be called "top" and "bottom" Working thread exits from behind the bottom cord. For a gradual start to the beadwork string 1 small bead and pass over the bottom and under the top. Wrap around the top and pass back through the bead and pass under the bottom cord on the return.

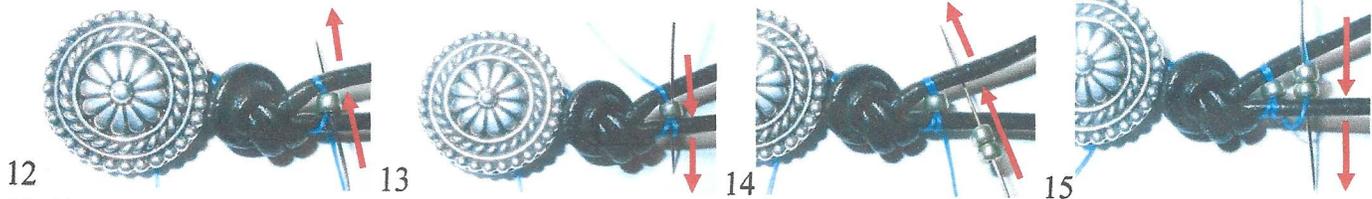


12-13 Repeat the thread path one more time.

14-15 String 2 beads. Pass under the top, around, then over the top back through the beads and under the bottom.

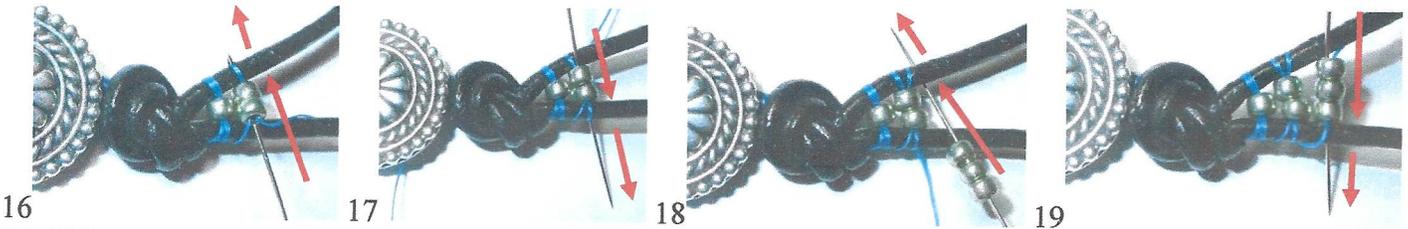


16-17 Repeat the thread path one more time.

18-19 String 3 beads. Pass under the top, around, then over the top back through the beads and under the bottom.

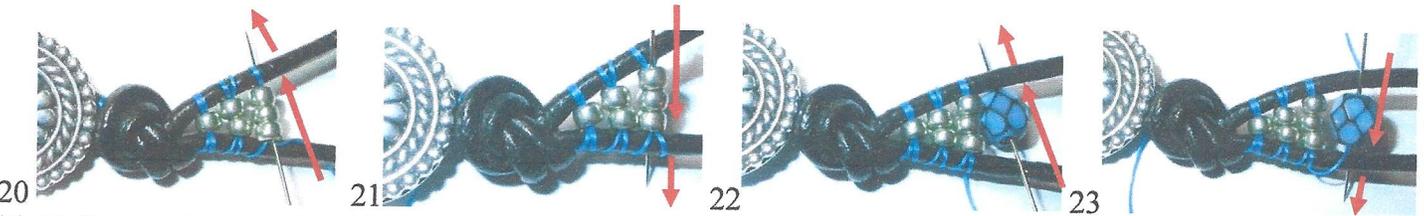

20-21 Repeat the thread path one more time.

22-23 String accent bead(s) Pass under the top, around, then over the top back through the bead(s) and under the bottom.

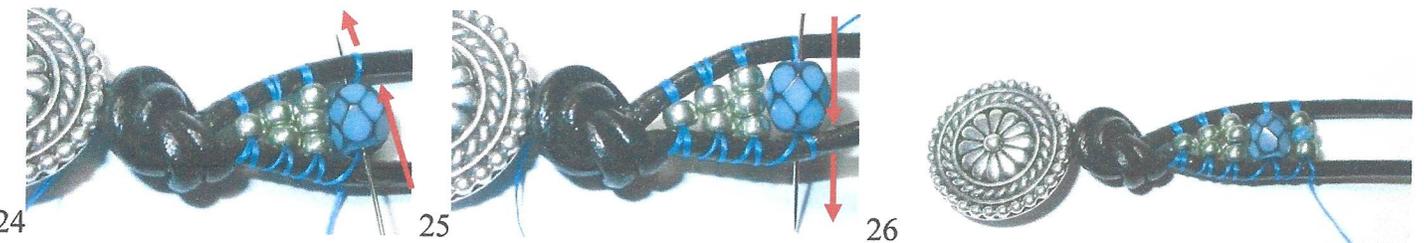

24-25 Repeat the thread path one more time.

26 String accent bead(s) Pass under the top, around, then over the top back through the bead(s) and under the bottom. Complete @1" of beading before placing the cords on the loom.



27 Tie a temporary overhand knot to join the ends of the leather cord




28




29


29 Attach the button elastic onto the wooden knob on the left side of the loom as shown. Carefully wrap the cords around the loom keeping the cords parallel, not overlapping

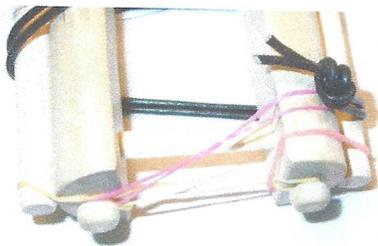

30

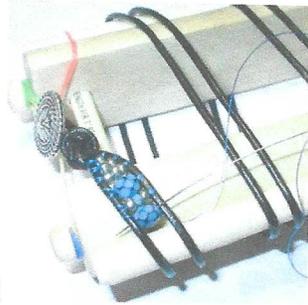

31

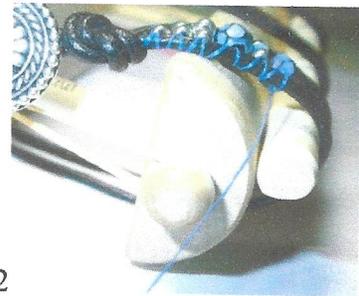

32

30 Wrap a 2nd elastic around the knot tied at the end of the leather cords in step 27 and use this elastic to secure the cord ends to a wooden knob on the right side of the loom.

Weaving on the loom:


31 The large tension rods lift the leather cords above the end bars and allow room for the needle and beads to pass under the cords. If needed you can position the rod under the beads just added to help lift them up so the bead hole is easier to access.

Shift the rods around the curve of the end bar for adding rows at the top half of the end bar curve and place under the newly added beads to add beads along the lower half of the end bar curve.

Weave across the open areas and shift and move the other tension rod to work your way around the opposite end bar.

When the beadwork is almost opposite the button on the last wrap remove the bracelet from the loom and try it on for size. Work more rows if needed, work reduction rows if desired (3,2,1) or tie off and trim the working thread.

Tie an overhand knot near the last row
Be sure to leave enough leather
between knots to fit the button.

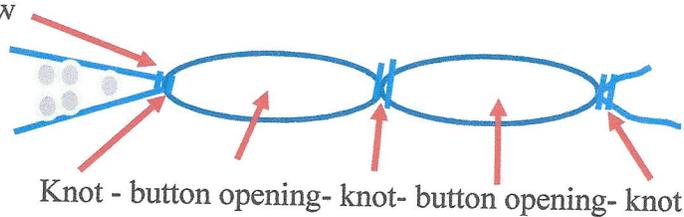

Knot - button opening - knot - button opening - knot